


# FlareAssist Radar Version 3.1

## Splitter Cable

### Plug Backside

The following connections are for those that do not wish to use the Splitter Cable / Audio Cable and want to hardwire the FlareAssist Radar unit into the aircraft.

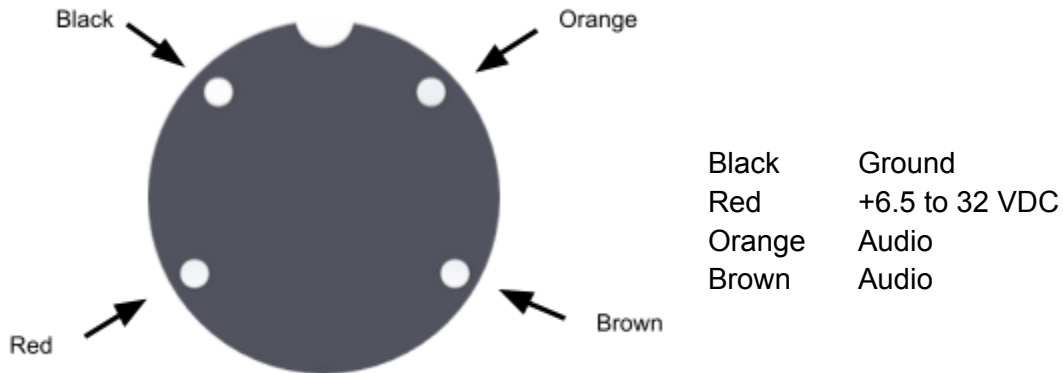

**Reversal of the Power (Red) and Ground (Black) will cause internal damage to the circuitry and is not covered under warranty!**

Recreational Mobility  
Valkaria Airport (X59)  
1 Pilots PI  
Malabar, FL 32950

(321) 253-9434

[jim@recreationalmobility.com](mailto:jim@recreationalmobility.com)

[www.flareassistradar.com](http://www.flareassistradar.com)